
BIANCA SHOWER DOOR

Installation Instructions

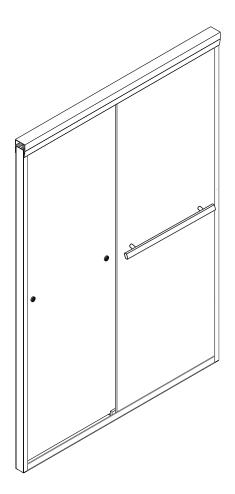

GD-BI487006/GD-BI487010 GD-BI567006/GD-BI567010 GD-BI607006/GD-BI607010 GD-BI607506/GD-BI607510

Size:44" -48" x70" EN(GD-BI487006/GD-BI487010) 52" -56" x70" EN(GD-BI567006/GD-BI567010) 56" -60" x70" EN(GD-BI607006/GD-BI607010) 56" -60" x75" EN(GD-BI607506/GD-BI607510)



◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufactruing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables. Note: This product is heavy and may require two people to install.


Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.

Tools Required

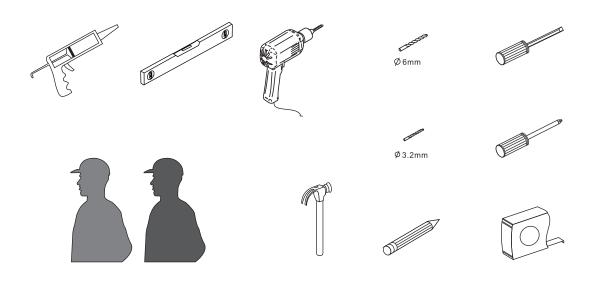




This product is heavy and may require two people to install.






◆ Box Contents:

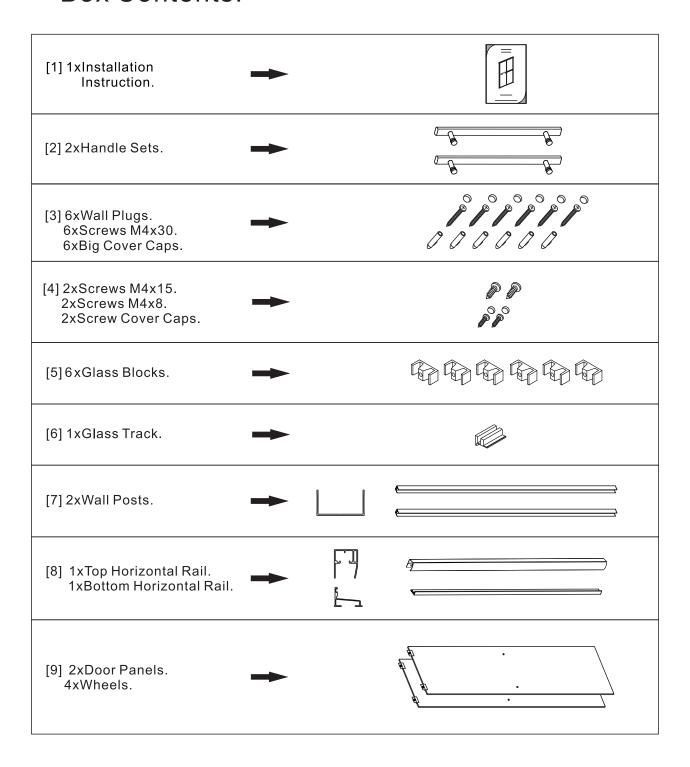



Assembly Drawing

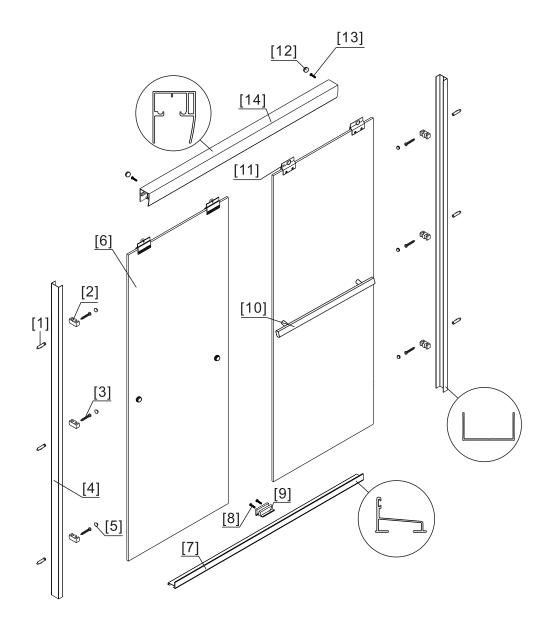


- [1] 6xWall Plugs
- [2] 6xGlass Blocks
- [3] 6xScrews M4x30
- [4] 2xWall Posts
- [5] 6xBig Cover Caps [6] 2xDoor Panels
- [7] 1xBottom Horizontal Rail

- [8] 2xScrews M4x15
- [9] 1xGlass Track
- [10] 2xHandle Sets
- [11] 4xWheels
- [12] 2xScrew Cover Caps
- [13] 2xScrews M4x8
- [14] 1xTop Horizontal Rail




◆ Installation Steps:

Step 1

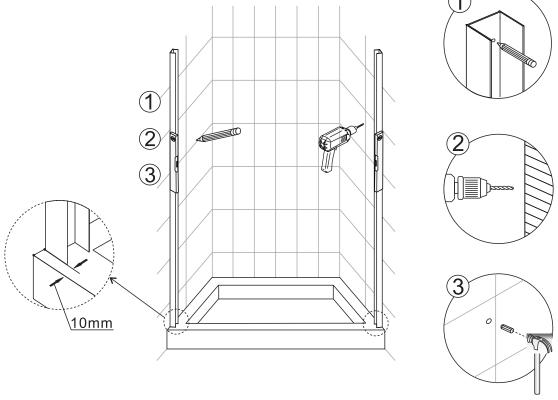



Step 2

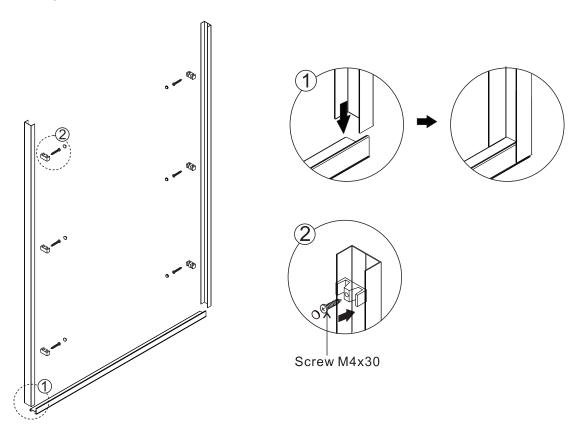





Step 3

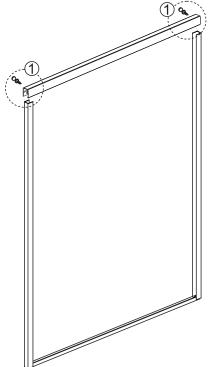


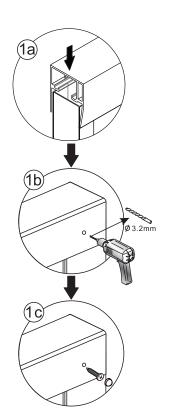

Step 4

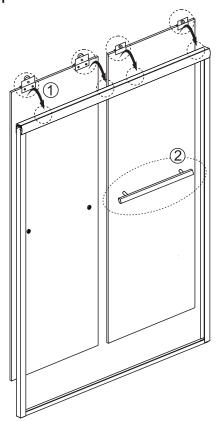

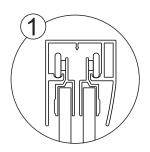


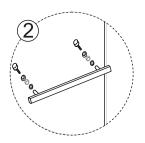

Ensure wall profiles are plumb. Adjust enclosure to be square and level. Wall post and profile should be adjust to square the doors and Ensure open door smooth.



Step 4

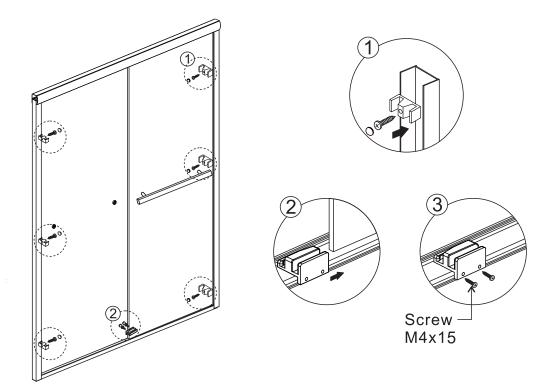

Step 5

